


INSTALLATION

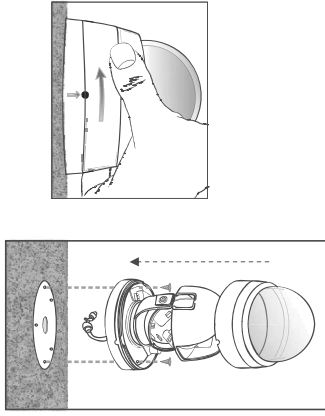

Attaching to the ceiling or wall

This section explains how to install the unit where cables are running through the interior of the ceiling or wall.


- Drilling holes in the ceiling or wall.
- Use the template included to mark out the position on the ceiling or wall where you wish to install the camera.
- When running cables through the interior of the ceiling or wall Use the template, and drill two or four holes for screws used to attach the camera body and one hole for the cables (Cables).

ADJUSTMENT

1. Direction and Lens

The camera body is set in a tri-axial mounting allowing movement in the pan, tilt and relational planes.

- 1) Adjust the direction of the lens so it faces the subject
- 2) Move the lever to adjust focus and angle of view
- 3) When you finished adjusting the direction of the lens, tighten the locking screw with a screwdriver.

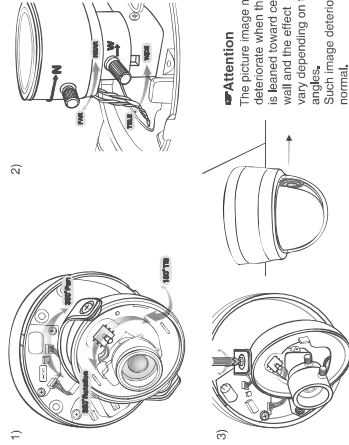


Attention

The picture image may deteriorate when the lens is focused toward ceiling or floor and the effect may vary depending on the view angles. Such image deterioration is normal.

2. OSD Switch and OSD Menu

Use the Multi Tact Switch within the camera

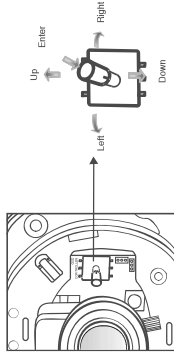


OSD MENU FUNCTION

LENS	DC	MANUAL
EXPOSURE	SHUTTER	BRIGHTNESS AGC DWDR
WHITE BAL	ATW1 ATW2	AWC-SET MANUAL
BACKLIGHT	OFF	BLC HLC
DAY&NIGHT	AUTO	COLOR BW EXT
SPECIAL	CAM TITLE	MOTION
		PRIVACY IMAGE ADJ
		DPC LANGUAGE VERSION
RESET	FACTORY	
EXIT		

* START SET UP MENU

Press the Middle Multi Tact Switch, the main setup menu is displayed on the monitor screen

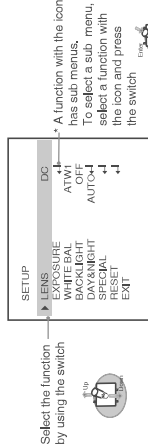

Select the function by using the switch


A function with the icon has sub menus. To select a sub menu, select a function with the icon and press the switch

1) LENS


Turn the Switch toward Left or Right side, Select DC or MANUAL

Simply make the adjustment in the following order to help make the focusing easier.


- Select MANUAL
- Adjust lens focus well
- Then return to DC

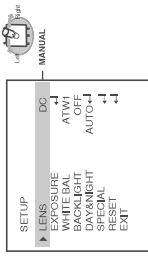

2) EXPOSURE

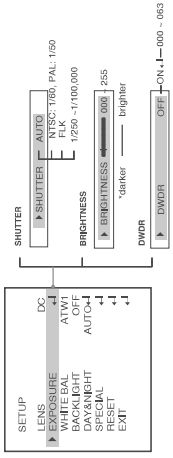


3) WHITE BALANCE

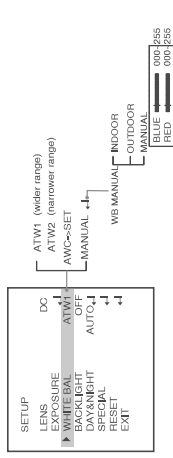

Attention BRIGHTNESS adjusts DC level of the lens


ATW1 (wider range)
ATW2 (narrower range)
AWC-SET
MANUAL
WB MANUAL
INDOOR
OUTDOOR
MANUAL
RED
000-255
000-255

4) BACKLIGHT

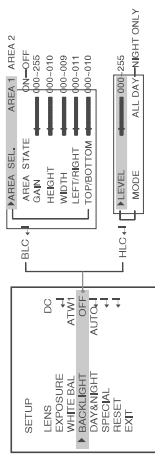


Attention When select BLC, AREA 1 always turns on

5) DAY&NIGHT

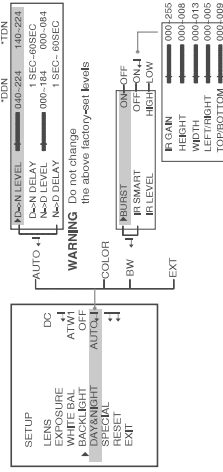


6) SPECIAL

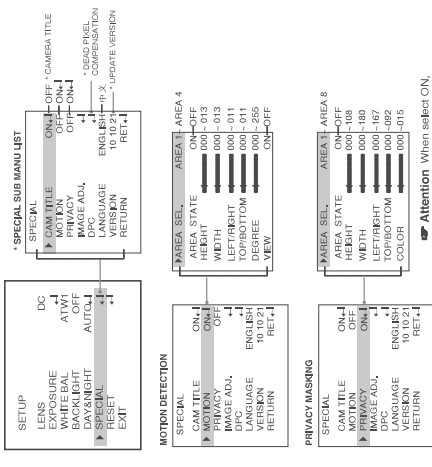

Attention When select ON, AREA 1 always turns on

IMAGE ADJUST

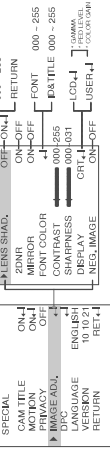

* LENS SHAD. LENS SHADING COMPENSATION
* NEG IMAGE NEGATIVE IMAGE

7) RESET & EXIT

